


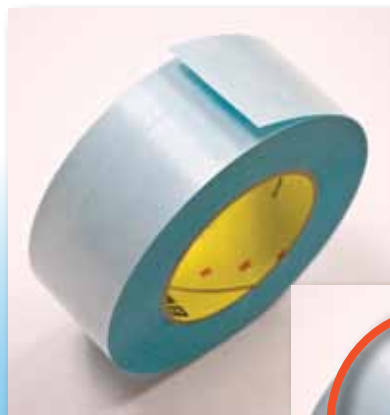

The Simple Splittable Flying Splice (SFS)...Step by Step



To start unwinding the tape, lift from the center with a straight edge tool. Do NOT peel the tape from the corner with your finger.



Confirm that the tape edge is not separated before applying the SFS tape.



1 Apply tape left to right and tear



Fold back and temporarily secure the last lap of paper. Apply tape across the roll, starting and ending 1/4 inch from the right and left edges.

Press a straight-edge firmly on the tape and tear. Hand tearing may cause pre-separation. Rub down the tape across the width of the roll, especially the leading edge.

2 Remove upper liner



Starting two inches in from the roll edge, peel upper liner off upward at a 90° angle.

3 Attach paper



Attach paper to exposed adhesive and fold back. Cut or tear to remove the excess paper.

4 Remove lower liner



Starting two inches in from the roll edge, peel the lower liner off downward at a 90° angle.

Ready to splice

